


Advance curve for analog coils PVL# 479 100 und PVL# 479 101

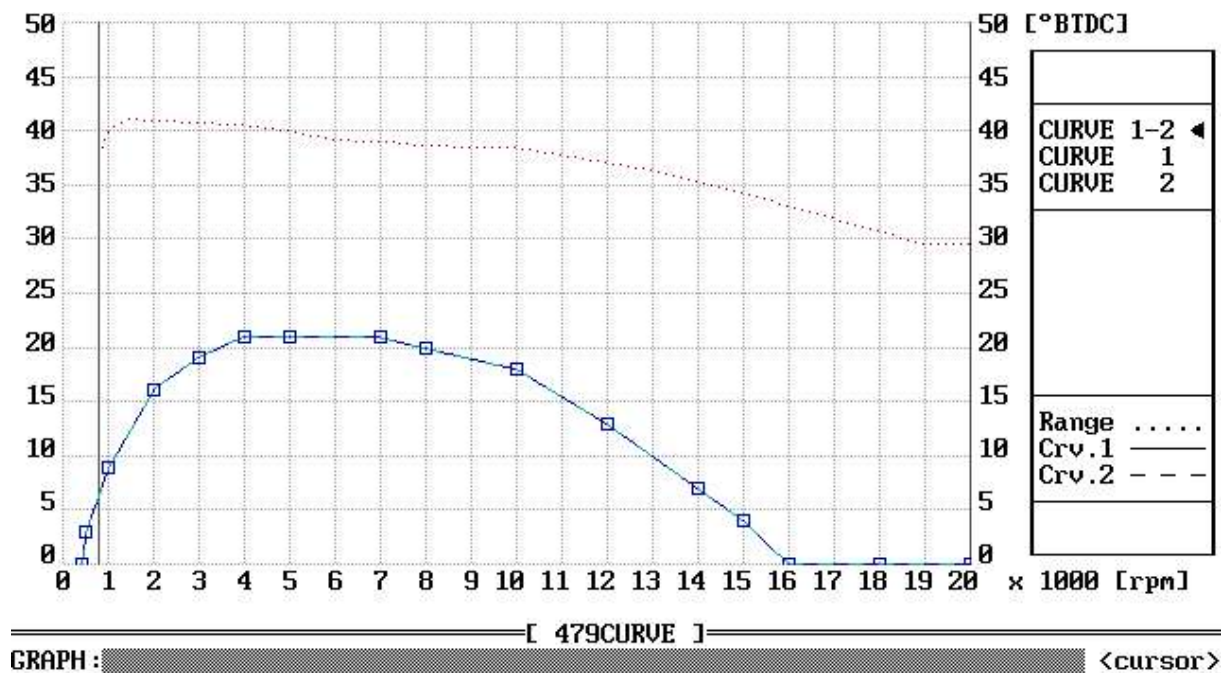

Coil: PVL# 479 100
 Stator: PVL# 000 1075 or PVL# 000 1077
 Rotor: PVL „not defined“

Setup to get these advance curve at the engine crankshaft:

1. Find TDC
 2. Turn the crankshaft 21° against the normal moving direction and fix it there.
 3. Mount stator and Rotor with markings corresponding to each other.
 4. Remove the crankshaft fixing.
- ➔ The markings on Stator and Rotor are corresponding between 4000rpm and 7000 rpm.